

DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

2016+ Chevrolet Camaro Sidemarker Installation Guide




Thank you for your purchase of this unique product for your Chevrolet Camaro! With this plug-and-play LED Sidemarker, you will be able to upgrade your factory sidemarker to a brighter, more modern appearance on the road. This product is a direct replacement for your factory sidemarker.



Tools Needed: T15 Torx Bit

PLEASE NOTE: The sidemarkers are marked using red and yellow stickers to indicate the front (amber) and rear (red) sidemarkers.

Front and Rear Sidemarker Installation

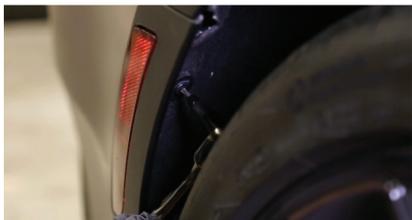

1. Using a T15 Torx Bit, remove the fastener located in the fender liner inside the wheel well. Pull back on the fender liner to access to the sidemarker.



2. Remove the sidemarker by depressing the clip on the bottom side of the sidemarker, then pushing it out. Then depress the clip on the top side of the sidemarker to release it.

2016+ Chevrolet Camaro Sidemarker Installation Guide

Front and Rear Sidemarker Installation (cont.)



3. Twist the factory plug counterclockwise to remove from the sidemarker, and remove the bulb.



4. Plug the connector from your new sidemarker into the socket. Ensure you have the correct polarity by hitting the unlock button. If the sidemarker doesn't illuminate, flip the connector 180°.



5. Twist the factory plug back into the new sidemarker to seal.



6. Place the sidemarker back into the bumper, clipping it into place. Reinstall the fastener. Repeat for all four sidemarker locations.

NEED MORE HELP?

Scan the QR code to link to our installation video online!

We've taken the time to test our products on your vehicle. We can guarantee compatibility and fitment the first time. No guessing game! If you need more help with installation, watch our step-by-step video to walk you through the process.

YouTube



**100% SATISFACTION
GUARANTEE**

**3 YEAR
WARRANTY**

